

## KF Fittings?

	<b>Hinge Clamp</b> NW16 NW25 NW40 NW50		<b>Blank Off</b> NW16 NW25 NW40 NW50		<b>Tee</b> NW16 NW25 NW40 NW50		<b>KF to Female NPT</b> NW16 NW25 NW40 NW50
	<b>Centering Ring</b> NW16 NW25 NW40 NW50		<b>Stub Blank</b> NW16 NW25 NW40 NW50		<b>4 Way Cross</b> NW16 NW25 NW40 NW50		<b>KF to Rubber Hose</b> NW16 NW25 NW40 NW50
	<b>O-Ring Replacement</b> NW16 NW25 NW40 NW50		<b>KF to KF Reducer</b> NW16 NW25 NW40 NW50		<b>Weld Socket Flange</b> NW16 NW25 NW40 NW50		<b>KF to NPT Male</b> NW16 NW25 NW40 NW50
	<b>Elbow 45°</b> NW16 NW25 NW40 NW50		<b>Elbow 90°</b> NW16 NW25 NW40 NW50		<b>Blank with Bore</b> NW16 NW25 NW40 NW50		<b>KF to Welch Adapter</b> NW16 NW25 NW40 NW50
	<b>Center Ring Overpressure</b> NW16 NW25 NW40 NW50		<b>Full Nipple Straight</b> NW16 NW25 NW40 NW50		<b>Half Nipple Short Weld Stub</b> NW16 NW25 NW40 NW50		<b>KF to CF Adapter</b> NW16 NW25 NW40 NW50
	<b>Flex Coupling Bellows</b> NW16 NW25 NW40 NW50		<b>KF Tee Reducer</b> NW16 NW25 NW40 NW50		<b>Adaptive Centing Ring</b> NW16 NW25 NW40 NW50		<b>KF Tee to NPT Female</b> NW16 NW25 NW40 NW50
	<b>Half Nipple Long Weld Stub</b> NW16 NW25 NW40 NW50		<b>KF View Port</b> NW16 NW25 NW40 NW50		<b>KF to LF Flange</b> NW16 NW25 NW40 NW50		<b>KF to Leak Detector Port</b> NW16 NW25 NW40 NW50
	<b>KF to VCR Male</b> NW16 NW25 NW40 NW50		<b>compression Port to KF</b> NW16 NW25 NW40 NW50		<b>KF to VCR Female</b> NW16 NW25 NW40 NW50		<b>KF to ASA</b> NW16 NW25 NW40 NW50
	<b>KF to PVC Adapter</b> NW16 NW25 NW40 NW50		<b>KF Manual Valve</b> NW16 NW25 NW40 NW50		<b>Reinforced Vacuum Hose</b> NW16 NW25 NW40 NW50		<b>KF Mist Filter</b> NW16 NW25 NW40